


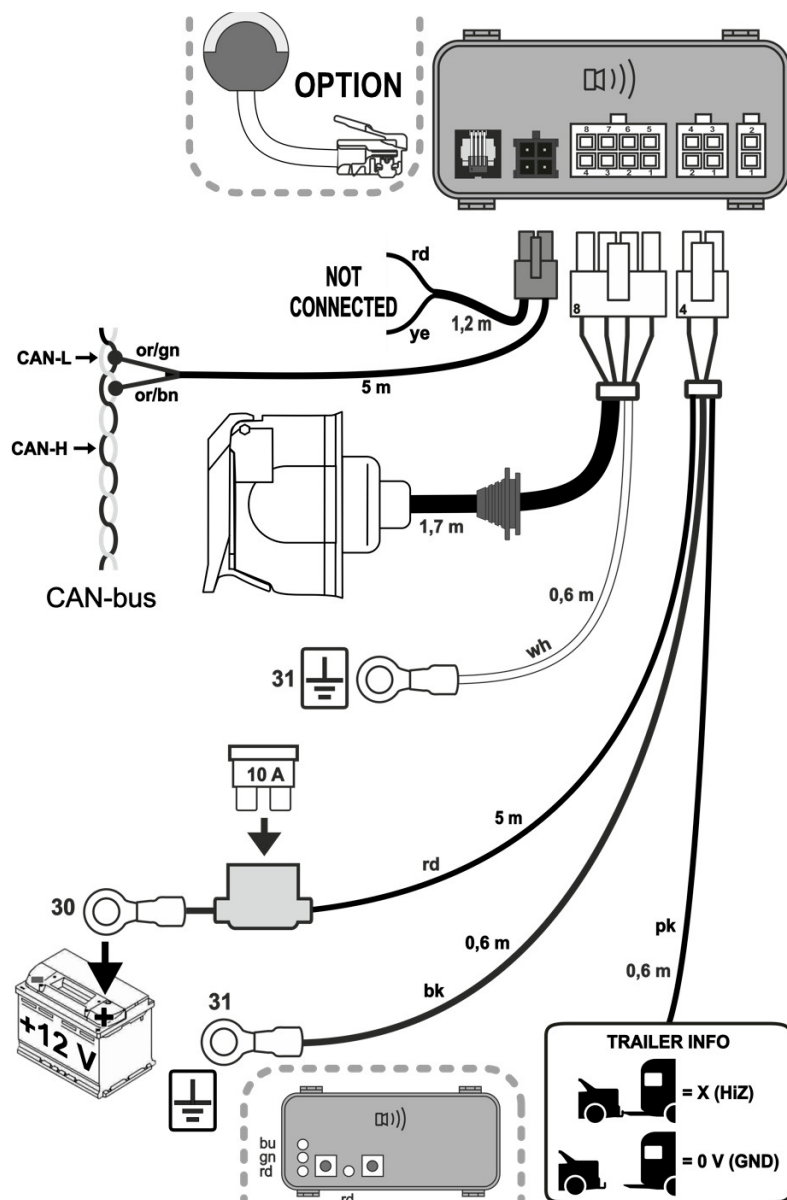

SERVICE OPERATION OF MODULE



!! USE ONLY WHEN REQUIRED !!



max. 	
1/L	10W + 21W
4/R	10W + 21W
5/58R	3 x 5W
7/58L	3 x 5W
6/54	3 x 21W
2/54G	21W
8/REV	21W

	bk	wh	bn	gn	rd	ye	bu	or	pk
DE	schwarz	weiß	braun	grün	rot	gelb	blau	orange	rosa
CZ	černo	bílá	hnědá	zelená	červená	žlutá	modrý	oranžový	růžový
SK	čierny	biely	hnedý	zelený	červený	žltý	modrý	oranžový	ružový
RO	negru	alb	maro	verde	roșu	galben	albastru	portocaliu	roz
GB	black	white	brown	green	red	yellow	blue	orange	pink
PL	czarny	biały	brązowy	zielony	czerwony	żółty	niebieski	pomarańczowy	różowy
UA	чорний	білий	коричневий	зелений	червоний	жовтий	синій	помаранчевий	рожевий

====[COMPATIBILITY LIST]====

== AUDI ==

A3 IV(8Y) 12.2023-..

== VOLKSWAGEN ==

Caddy V	11.2023-..
---------	------------

Golf VIII	04.2024-..
-----------	------------

Tiguan III 03.2024-..

Passat B9	03.2024-..
-----------	------------

Tayron 12.2024-..

Tiguan III 03.2024-..

== SKODA ==

Kodiag II 04.2024-..

Octavia IV	07.2024-..
------------	------------

Superb IV 04.2024-...

== SEAT / CUPRA ==

Formmentor 12.2023-..


Leon IV 12.2023-...

Terramar	08.2024-...
----------	-------------

== FORD ==

Tourneo Connect 3 11.2023-...

Transit Connect 3	11.2023-..
-------------------	------------

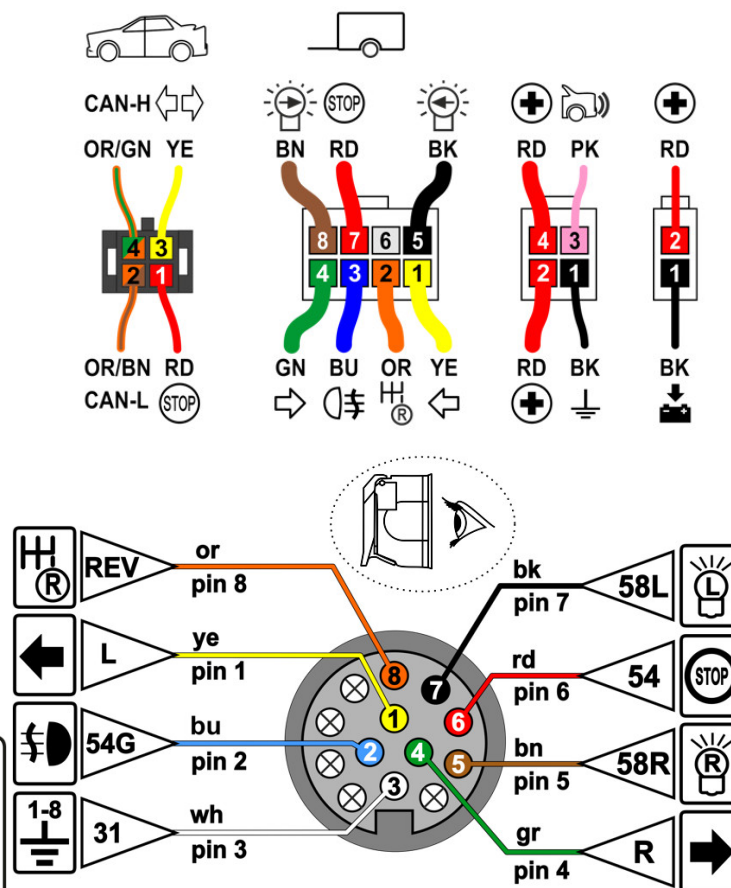

List of cars VW Group - prog.59 (group 3)

(A)

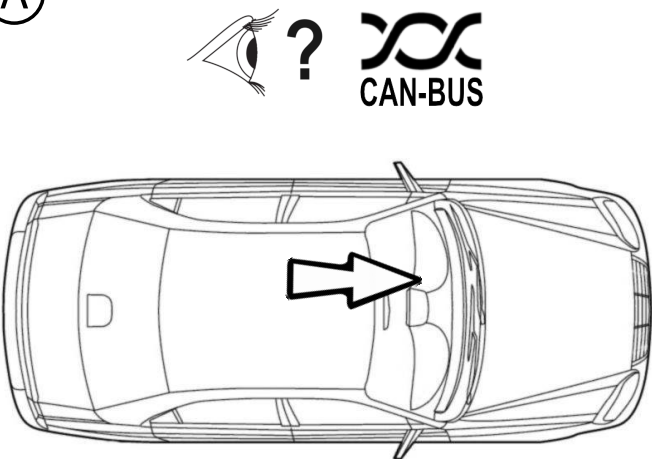


Diagram showing the location of the CAN-BUS system in a car, indicated by an arrow pointing to the rear window area.

(B)

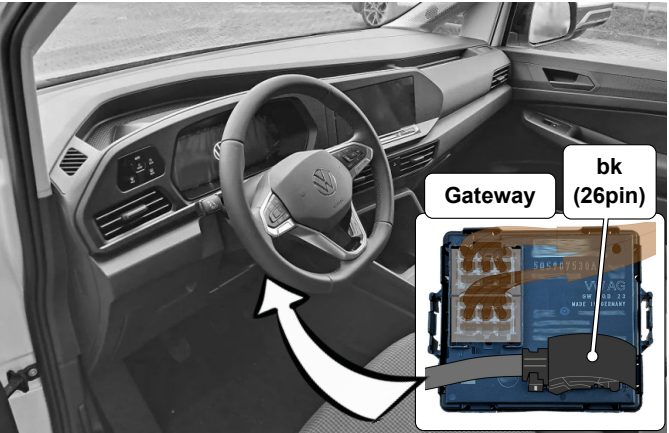


Image showing the interior of a car, specifically the dashboard and steering wheel area. A callout shows a Gateway module and a 26-pin connector.

(C)

OPTION **1** EMPTY pins 19 and 20 in plug - to do **[A]**

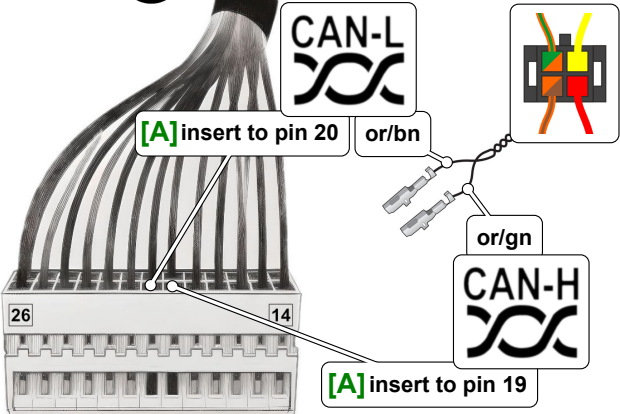


Diagram showing the wiring for CAN-L and CAN-H lines. Pin 20 is labeled [A] insert to pin 20 or/bn. Pin 19 is labeled [A] insert to pin 19 or/gn.

(D)

OPTION **2** plug WITH wires in pins 19 and 20

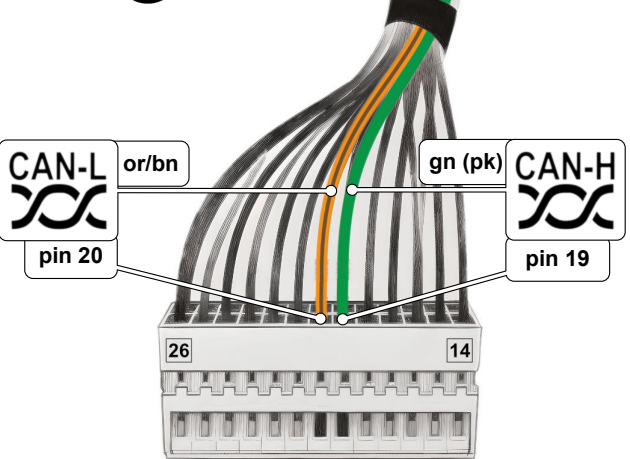


Diagram showing the wiring for CAN-L and CAN-H lines. Pin 20 is labeled CAN-L or/bn pin 20. Pin 19 is labeled CAN-H gn (pk) pin 19.

(E)

OPTION **2** **[A]** to cut - and **[B]** to connect


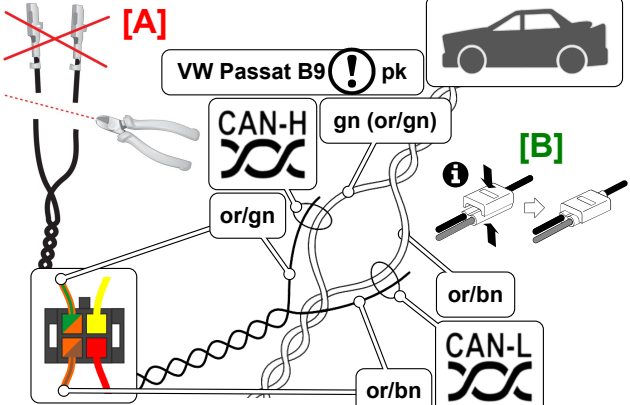


Diagram showing the wiring for a VW Passat B9. It includes a car icon, a CAN-H line, a CAN-L line, and a 26-pin connector. Pin 20 is labeled [A] to cut - and [B] to connect. Pin 19 is labeled [B] to connect.

(F)

NO CODING REQUIRED !

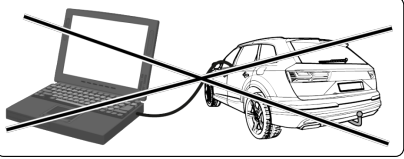

FACTORY PRECONFIGURATION

CAN program	CAN Mode
59	Passive
PDC Mode	FOG Light Mode
GND	Sequential